




Optional Lock Installation

1. Place lock on vertical section. Space retracted bolt 1/8" from adjacent door, mark mounting holes and drill 1/8" screw holes.
2. Mark closed position on opposite panel; locate secondary position 4" to 5" down for ventilation.
3. Drill a 1/4" or slightly larger hole at the closed position and a second hole for ventilation.
4. Mount lock with door closed.

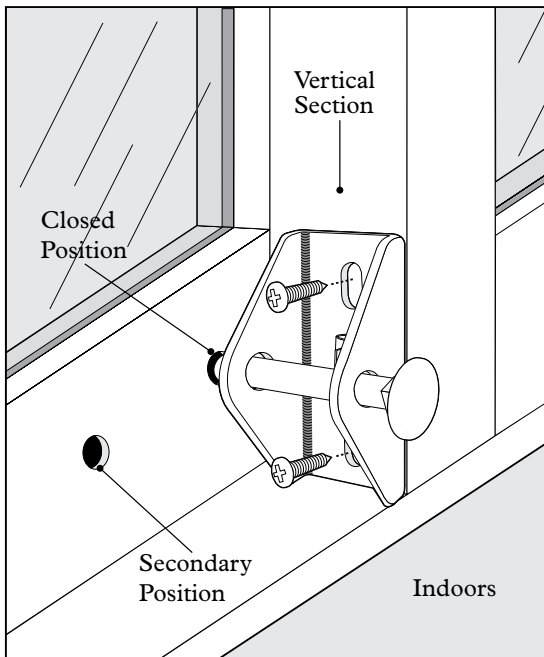

Glass Sweep

The Glass Sweep should be installed onto the back edge of your sliding glass door to form a seal between the sliding glass door and the stationary glass door. Clean the edge of the sliding glass door. Position the Glass Sweep at the top of the door with the flexible part touching the glass of the stationary door. Carefully peel the backing and press the Glass Sweep in place as you move down to the bottom of the door. Trim any excess with scissors.



Weather Stripping

Clean the edge of the sliding glass door. Position the Weather Stripping at the top of the door. Carefully peel the backing and press the Weather Stripping in place as you move down to the bottom of the door. Trim any excess with scissors.

